

Audio Interface Harness Adapter

Installation Guide (for BOSE equipped 2021-23 ROGUE)

1. Ensure the car is OFF and locate the BOSE Amp under the front driver seat or factory sub in the trunk (see diagram below), depending on the type of kit you ordered.
2. Use a medium sized flathead screwdriver to press in the latching clip & **carefully disconnect** the connectors from the Bose Amp or Subwoofer that will attach to the harness adapter.
3. Plug the adapter into the corresponding connectors as appropriate. Also make any connections between the adapter itself, if applicable.
4. Refer to the labeling on the harness adapter to connect your audio equipment.


The Bose radio outputs low-level differential balanced signals (that go through the specifically designed RCA connections of the harness adapter). Therefore, we recommend audio equipment that has differential inputs, or RCA inputs capable of accepting preamp and speaker-level signals.

 - Speaker Wiring (if your adapter has it) is labeled with a speaker number, in reference to the diagrams below. Speaker wiring goes to the Output of your amplifier(s).


Note: Gray or Red wire connections are + (Positive). Black wire connections are - (Negative).

SPEAKER WIRING DIAGRAM

- 1 - Front Right Dash Speaker**
- 2 - Front Left Dash Speaker**
- 3 - Front Right Tweeter and Door Speaker**
- 4 - Front Left Tweeter and Door Speaker**
- 5 - Rear Right Door Speaker**
- 6 - Rear Left Door Speaker**
- 7 - Subwoofer**

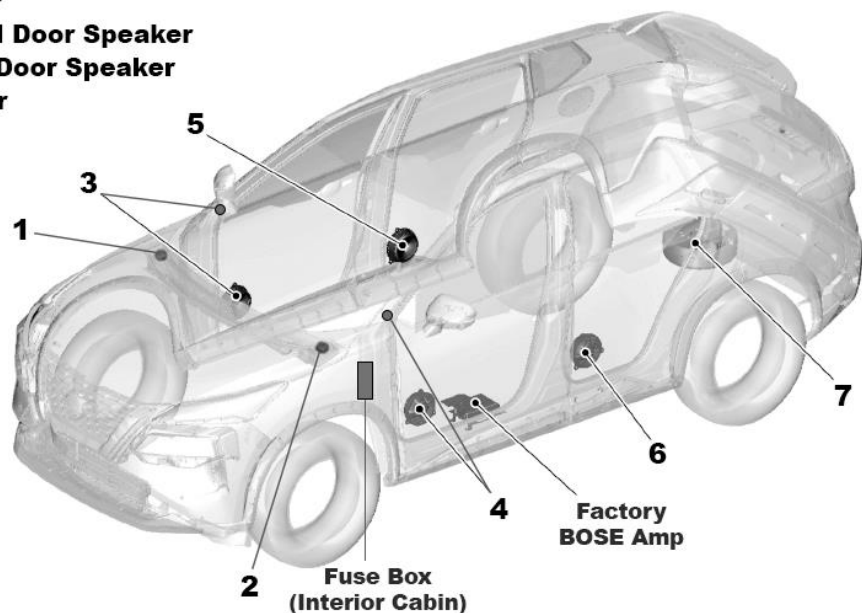

- For the Remote Turn-on Wire, Locate the fuse box in the interior cabin (see diagram above) and remove the fuse circled in the photo below. Connect the fuse tap to that location, then connect the blue wire on the main harness adapter to the fuse tap.

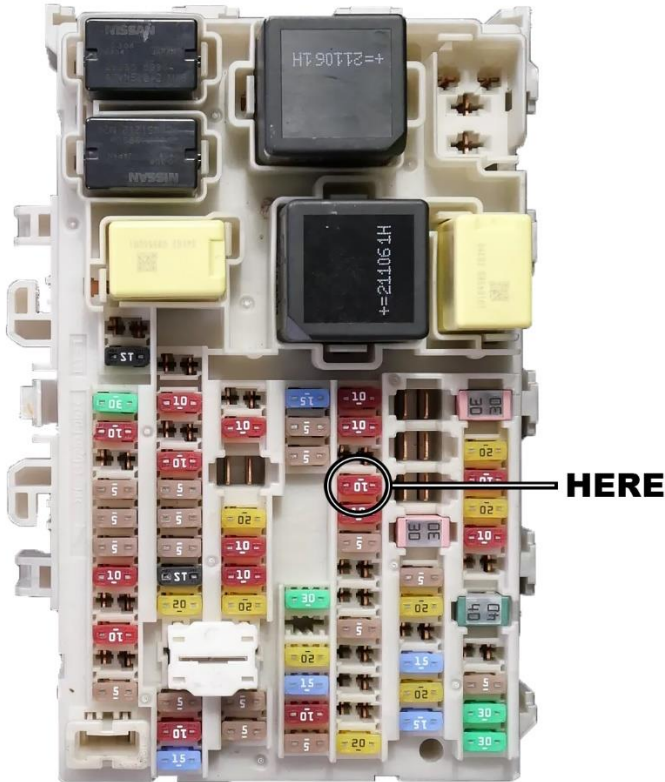

5. After making the connections you want to your audio equipment, be sure to **properly secure** any remaining/unused connections of the adapter to avoid any shorts or damage.
6. Once all your connections have been made and everything is secure, you can turn the car on to test everything out. Ensure everything looks and sounds ok.

Note: You may want to disconnect the ANC (Active Noise Control) connection if included on the interface harness, or turn ANC off in the System Diagnostic Menu of the factory radio to prevent it from interfering with the sound quality of your new audio upgrade.

7. Adjust your equipment settings as necessary, and that's all there is to it!

Enjoy Your New Upgrade!